

## Alarm Instructions



### Arming

To arm the system wait till you see the green tick and hold down **5** until the keypad beeps. You can also arm using your **4 digit code**.

### Disarming

To disarm enter your **4 digit code**.

If you ever make a mistake press **#** and start again.

To partially arm the system at night press **2** for one second.

### Bypassing a Zone

Press **\***

Press **1**

Type in the Zone you are having trouble with (ie. Zone 6 would be 06; Zone 12 would be 12)

Press **#**

### Arm

Do this every time you leave and arrive back home

**To change time: \* 6**    \_ \_ \_ \_    **Press 1**    \_ \_    \_ \_    \_ \_    \_ \_    **#**  
 (Master Code)                              (24Hr Time)                      (Month    Day    Year)

**To change code: \* 5**    \_ \_ \_ \_    \_ \_    \_ \_    **Press #**  
 (Master Code)              (User No.)              (New Code)

Enter user number according to which code to change. Master code is User 40. If client wants to add a new code and they have no other active codes then you would start at user 01. When entering user number must always be 2 digits. Always remember master code I User 40!!!

### To check trouble condition:

Enter: **\* 2** and a number will then appear on the screen.

**1** - System trouble. Press **1** again to determine the exact problem.

- If number **1** appears again the system has a low battery.
- If number **2** appears there is a problem with the bell circuit.
- If number **3** appears there is general system trouble.
- If number **4** appears there is a fault with a tamper input on a module (e.g. expander).
- If number **5** appears there is a problem communicating with a module on the system (e.g. keypad, expander, anything which would connect to the com bus).
- If number **6** appears there is a RF Jam Detected.
- If number **7** appears the PC5204 module has a low battery.
- If number **8** appears the PC5204 module has AC Fail.

**2** – No AC to Panel (No Power)

**3** – Telephone line trouble.

**4** – Failure to communicate to monitoring station or client’s mobile phone.

**5** – Zone Fault. Press number **5** again to determine which zone has the fault.

**6** – Zone Tamper. Press **6** again to determine which zone has the fault.

**7** – Wireless Device Low Battery. Press **7** again to see which zones have low batteries

**8** – Loss of Clock and Date.

