

# **RESET NVR/CAMERA CONNECTION**

1. On the monitor screen go to menu
2. Menu go to shutdown
3. Once selected shutdown it will come up with a message saying ok to power down
4. Advise client to power down system
5. Take power cord out of the power supply (mains power socket in the wall)
6. Wait a minute and re-plug in the power cord give time to reboot